


**CLOSED LOOP SYSTEM
DISCONNECT POWER BEFORE INSTALLATION.**

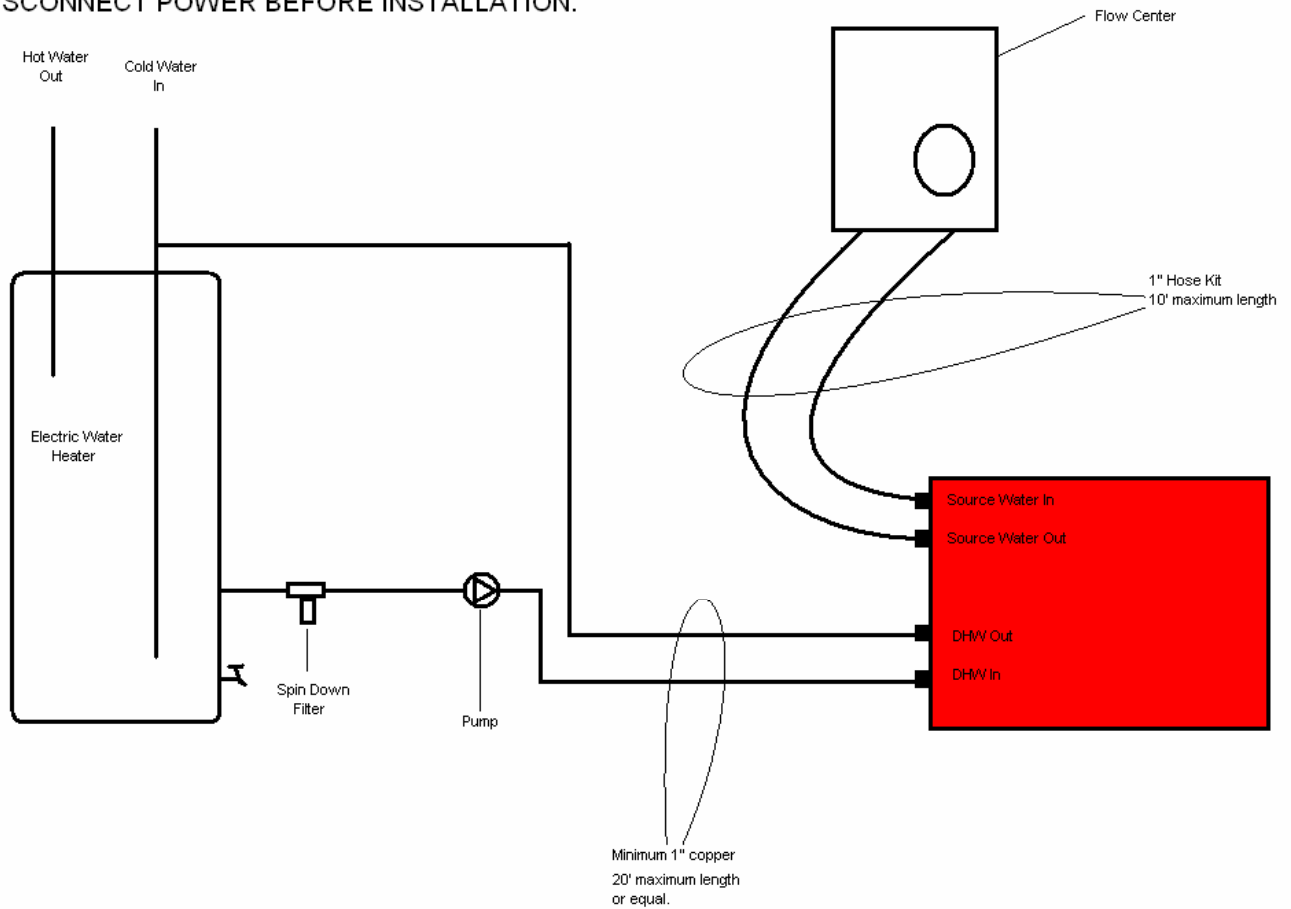

- All water piping to be insulated in unconditioned spaces.
- Remove flow control device from cold water dip tube in water tank (where applicable)
- Disconnect and Remove Lower heating element of the water tank, install pipe from this location to "DHW In" adapter.
- Wire nut remaining heater element wires after removal of the element!